




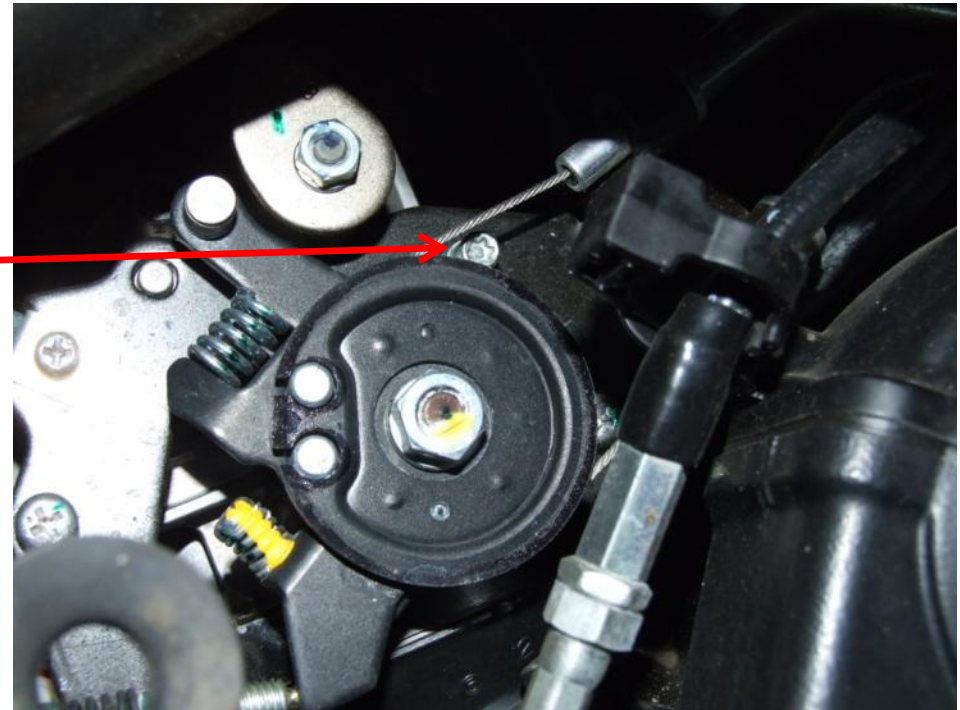

Remove this infill trim,
using a 4mm Allen Key

Then remove this restricter bolt,
using a Torx T-20 tamper proof tool
(the one with a hole in the middle)

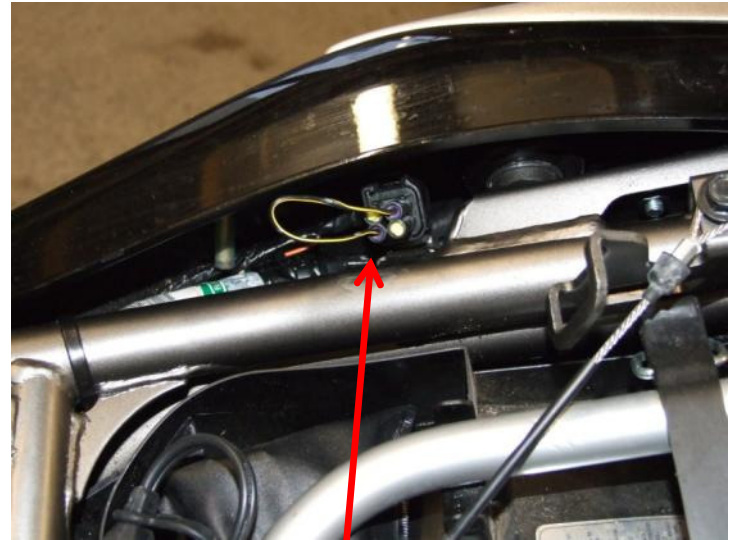

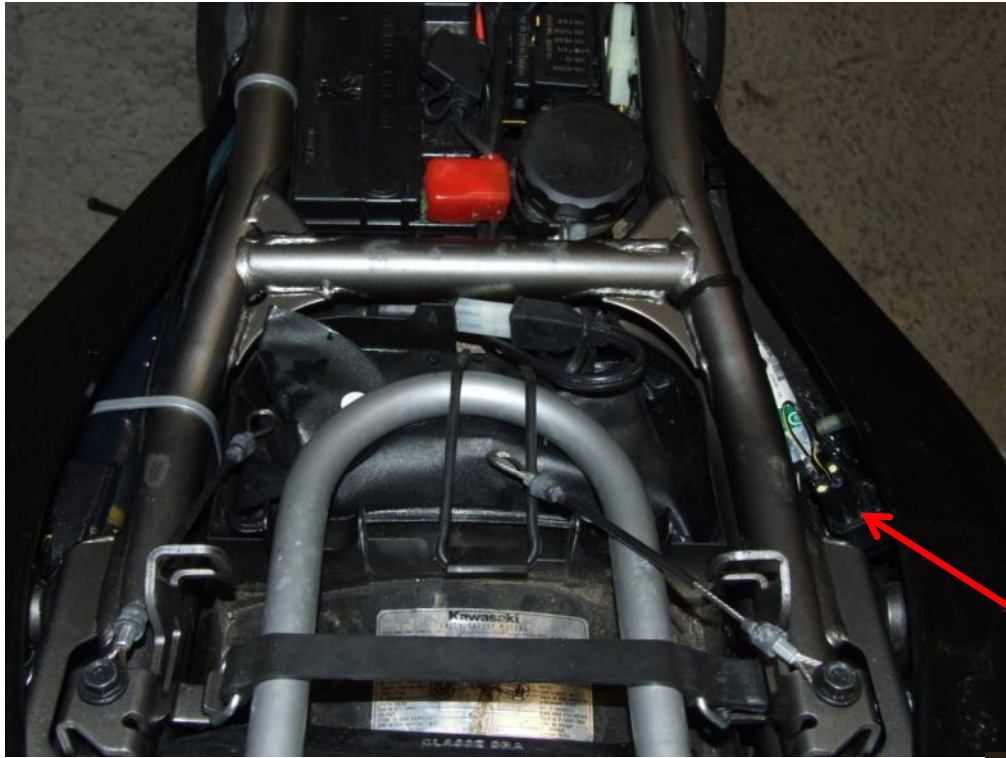

Remove this plug, (or cut & insulate the wire).

Correct blanking plug fitted

